

DALE DISTRIBUTING LTD.  
563 MINORU BLVD.  
RICHMOND, B. C.

BOOT GUARD ADAPTER PLATE  
TWO-PLAYER COMPUTER SPACE

To prolong the life of the BOOT on the Two-Player Computer Space we have designed an Adapter Plate which restricts the movement of the Joystick. The Adapter Plate is made in two pieces because the Joystick hole is smaller than the large upper end of the Joystick Handle.

The insertion procedure is as follows:

1. Remove the five clamps from the underside of the Control panel. See figure 1.
2. Turn the control Panel upside down so that the Joysticks are in the hole in the cabinet.
3. Remove the switch board from the Joystick Assembly and set it aside.

NOTE: The two wires coming from the Joystick Handle are still intact and go through the hole in the switch board.


4. Loosen the nuts on the four carriage bolts that attach the Joystick Assembly to the Control Panel.
5. Remove the old Boot (remnants) and work the new Boot over the Joystick Handle (SLOWLY and CAREFULLY). Then seat the Boot into the hole in the Control Panel.
6. Remove the nuts from the four carriage bolts (loosened in step 4 above).

NOTE: Take note of the EXACT orientation of the Joystick Assembly. The two Assemblies are oriented differently in relation to the Panel.

7. Fit the Adapter Plate over the four carriage bolts so that the hole in the Adapter Plate to which the center hole is closest goes over the bolt that is closest to the Boot hole in the Control Panel.

NOTE: The bolt hole that is closest to the center hole of the Adapter Plate is the one shown to the right in the sketch. IF THE JOYSTICK WILL NOT MOVE EQUALLY IN ALL FOUR DIRECTIONS, THE ADAPTER PLATE IS IN WRONG.

8. Replace the Joystick Assembly so that it is oriented the same as it was before (as noted at step 6 above) and replace the four nuts upon the carriage bolts.
9. Tighten the nuts onto the carriage bolts and check the operation of the Joystick for equal movement in all four directions (see note at step 7 above).
10. Replace the switch board.
11. Repeat steps 3 through 10 on the other Joystick Assembly.
12. Replace the Control Panel onto the cabinet.

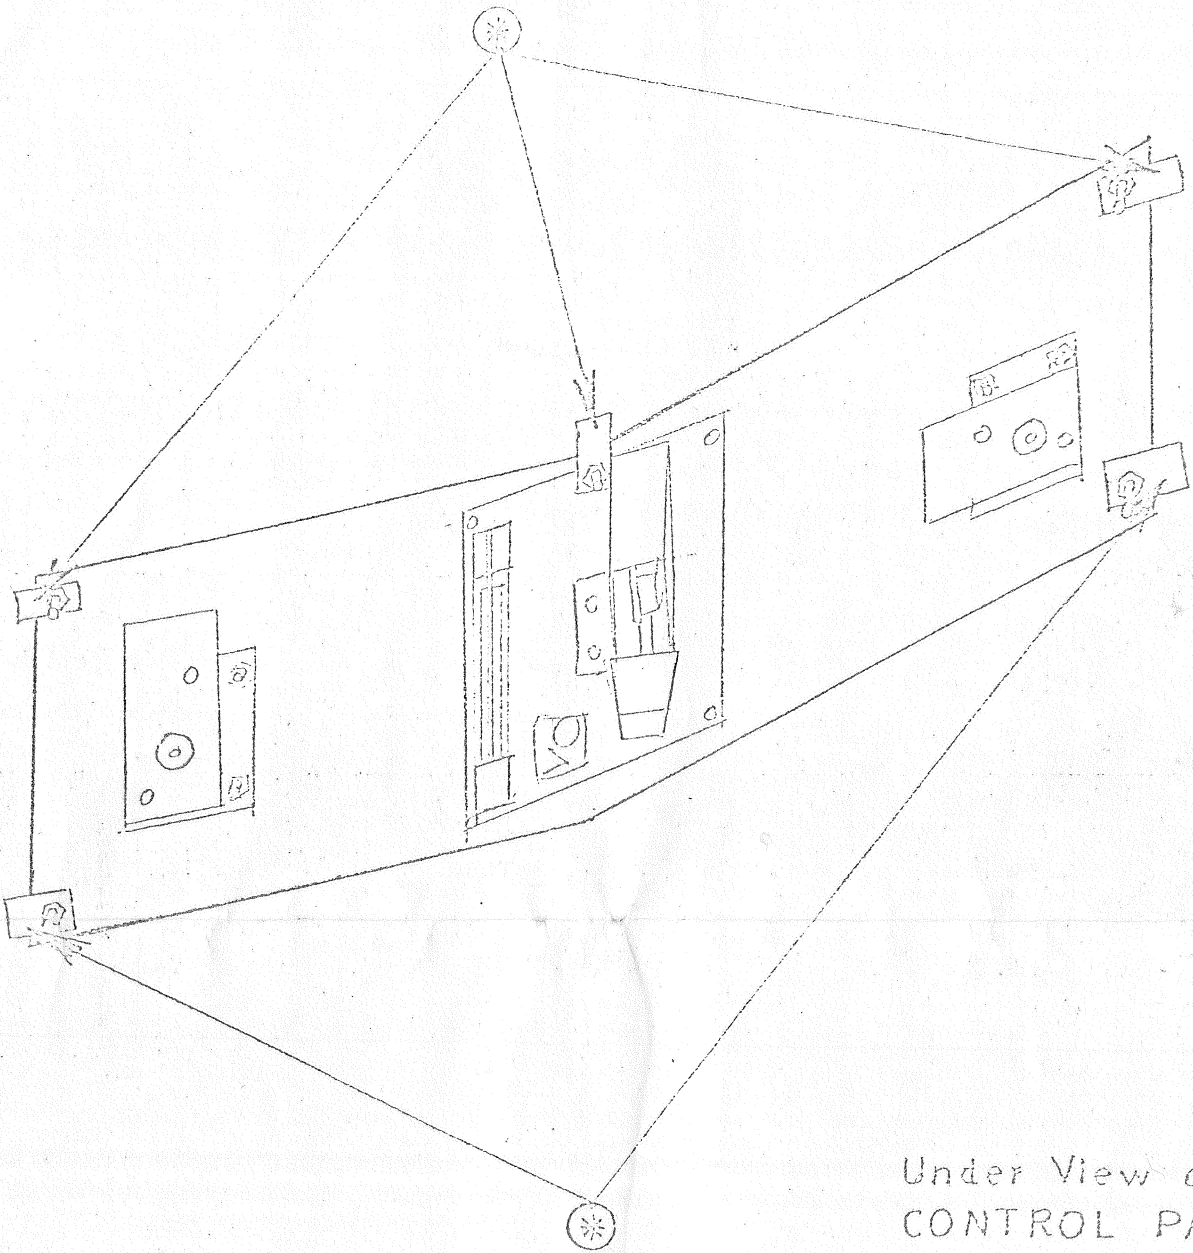

Under View of  
CONTROL PANEL

⊛ The five clamps  
are removed first,  
then the Control  
Panel can be turned  
over.

JOYSTICK  
ASSEMBLY

ADAPTER PLATE

BOOT

CONTROL PANEL

