

INSTALLATION INSTRUCTIONS
Kit 238, Popularity Meter, Part No. 141885
For Use With
Wurlitzer Model C-110 Cassette Phonograph

Material Required

1 - 141902	Popularity Meter Assembly
3 - 76901-151	Screw, 10-32 x 5/16 HEX
1 - 141906	Installation Instructions

Kit 238 Popularity Meter, Part No. 141885, was designed to be used with the Model C 110 Cassette Phonograph to provide a means of establishing the number of times a given Cassette Tape is played.

To install Kit 238 in Wurlitzer Model C-110 Cassette Phonograph, perform the following:

1. Remove retaining ring securing white Delrin cassette stop to Cassette Tape Magazine. Return retaining ring to stock or discard.
2. Remove Delrin cassette stop. Return to stock or discard.
3. Position Popularity Meter Assembly, Part No. 141902, on Cassette Tape Magazine as shown in Figure 1.

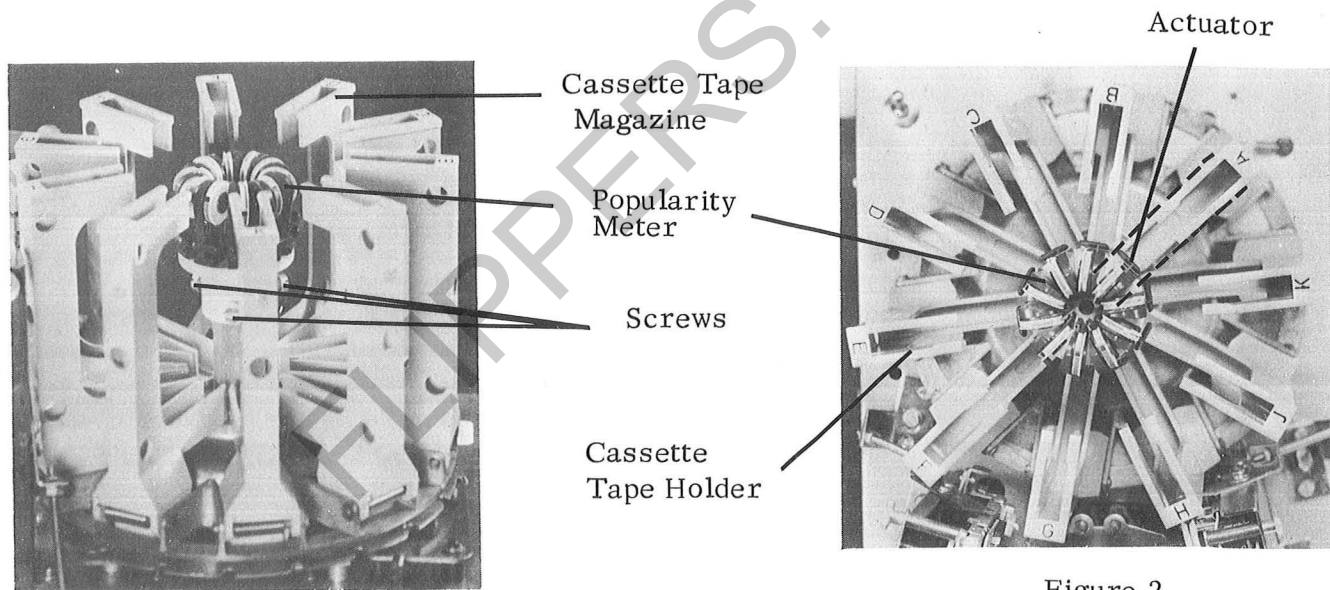


Figure 1.

Figure 2.

4. Align Popularity Meter Actuator with Cassette Tape Holder as shown in Figure 2.
5. Install three-Screws, Part No. 76901-151, in Popularity Meter Assembly as shown in Figure 1. Do not tighten Screws at this time.
6. Place cassette tape in Cassette Tape Holder and manually actuate Popularity Meter Actuator to verify proper alignment and operation.
7. Tighten three screws securely.