INSTALLATION INSTRUCTIONS READOUT CIRCUIT MODIFICATION PACKET, PART NO. 137334

List of Materials

2 - 77377	Resistor, 125	ohm, 10 W	2 - 73601-7	Nut
1 - 137300	Insulator		12" - 75004-9	Wire
2 - 74850-98	Screw		1 - 137337	Installation Instructions

To install Modification Packet, Part No. 137334, proceed as follows:

- 1. Disconnect and remove Control Unit from Phonograph.
- 2. Layout holes to be drilled as shown in Figure 1.
- 3. Using a Number 18 Drill Bit, drill two holes.
- 4. Remove burrs from drilled holes.
- 5. Place Insulator (Item 3, Figure 2), Part No. 137300, in Chassis and Socket Assembly as shown in Figure 2.
- 6. Install Screws, Part No. 74850-98, in Resistors, Part No. 77377.
- 7. Install Resistors with Screws through Insulator (Item 3, Figure 2) and holes in Chassis and Socket Assembly as shown in Figure 2.
- 8. Install Nuts, Part No. 73601-7, on Screws and tighten nuts until snug.
- 9. Cut Wire, Part No. 75004-9, into four 3" pieces. Strip and tin ends of wires.
- 10. Connect one 3" piece of wire (Item 1, Figure 2) between top lug of Resistor (Item 2, Figure 2) and Contacts 9 and 13 of SIDE 1 RLY Socket as shown in Figure 2.
- 11. Connect one 3" piece of wire (Item 4, Figure 2) between bottom lug of Resistor (Item 2, Figure 2) and Contact 14 of SIDE 1 RLY Socket as shown in Figure 2.
- 12. Connect one 3" piece of wire (Item 7, Figure 2) between top lug of Resistor (Item 5, Figure 2) and Contacts 9 and 13 of SIDE 2 RLY as shown in Figure 2.
- 13. Connect remaining 3" piece of wire (Item 6, Figure 2) between bottom lug of Resistor (Item 5, Figure 2) and Contact 14 of SIDE 2 RLY as shown in Figure 2.
- 14. Solder all connections.
- 15. Reinstall and reconnect Control Unit in Phonograph.
- 16. Check Phonograph for proper operation.

NOTE

It is suggested that after Phonograph has been checked for proper operation, that a minimum of six even number and six odd number selections be made and selection cycle be verified utilizing RECORD NOW PLAYING indicator.

17. Verify SIDE 1 and SIDE 2 READOUT SWITCH adjustment per Wurlitzer 3400 Series, Phonograph Service Manual, Pages 8 C and 9 C.

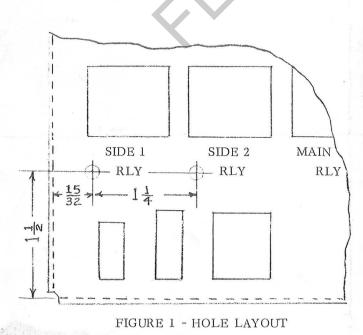


FIGURE 2.