

## WURLITZER

SUBTECT:

Dollar Bill Accepter Double Pulser Modification.

COMPLAINT:

Circuit Breaker being tripped by too long a pulse when validating

a dollar bill.

CORRECTIVE ACTION: Should this condition exist in 3400 Series Phonographs equipped

with Dollar Bill Accepter, perform the following:

Materials Required

1 - 76700-2 Diode

2 - 71054-4 Sleeving

- 1. Verify continuity between lug 4 of 5 lug terminal strip (3, Figure 1) and Pin 8 of Computer Plug. If continuity can not be established transpose the Orange wires connected to lugs 3 and 4 of 5 lug terminal strip. Repeat continuity check.
- 2. Cut lead of Diode (1, Figure 1) as close to relay terminal connection as possible and connect this lead to Lug 2 of 3 Lug Terminal Strip as shown in Figure 2. Do not solder at this time.
- 3. Remove Black wire with Orange tracer (2, Figure 1) from coil terminal of left hand relay (DO NOT remove Purple wire).
- 4. Connect Black wire with Orange tracer, removed in Step 2, to Lug 2 of 3 Lug Terminal Strip as shown in Figure 2. Do not solder at this time.
- 5. Install Sleeving on Diode leads and connect Band or Cathode Lead to coil terminal of left hand relay as shown in Figure 2. Solder this connection.
- 6. Connect remaining Diode lead to Lug 2 of 3 Lug Terminal Strip as shown in Figure 2. At this time there should be the 2 Diode leads and the Black wire with Orange tracer connected to Lug 2 of 3 Lug Terminal Strip as shown in Figure 2. Solder these connections securely.

NOTE: All 3400 Series Phonographs equipped with dollar bill accepters and having the double pulser unit mounted beneath the cross rail will not need this modification.

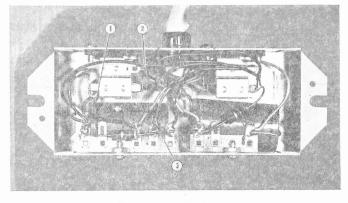


Figure 1 - Before

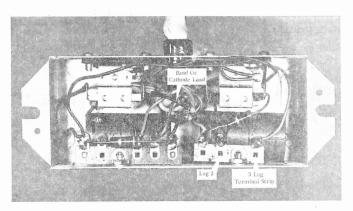


Figure 2 - After

## WIRING DIAGRAM SUPPLEMENT 3400A Series Phonograph (With Dollar Bill Accepter)

