



In making a field survey of the new Model 1015, we have found cases where the rivet on the actuating lever, shown above, is not tight.

This condition has now been corrected but all phonographs previously received should be checked for this particular trouble. When this rivet becomes loose, it will cause the following troubles:

1. Rotary arm pin jamming on the star wheel.

2. Take out block pulling out 2 trays at one time.

3. Repeating selections without depositing coins.

We submit this Service Slant for your assistance.

Sincerely,

M. A. Bartels Service Department North Tonawanda Division

1012247

W180