



SUBJECT: 6 Plays for 25¢ - 3020 Wall Box

1. Mounting of 6 Play Coin Switch (Part No. 54046)

Install the switch and wire assembly under the upper R. H. selector contact plate mounting screw. (Fig. 1.)

2. Connections

All connections should be cleaned and turned before making the solder joints. Connect the short wire from the switch assembly to the contact of the Coin Relay that is wired to patch "B" of the coin contact plate. (In the 3020 Manual this contact is identified as No. 6 with orange conductor.) Remove the slug rejector and dismount the coin switch, route the long wire along the whipped cable and through the casting with the three coin switch wires. Connect it to the 25¢ coin switch. (Fig. 2.) The closing of the switch will produce a circuit from patch "B" to patch "C", and, so long as the 25¢ coin switch is closed, will provide an impulse to the accumulator.

3. Adjustment

The mounting bracket of the switch (Part No. 54046) is provided with an elongated hole to permit control of the time at which the selector contactor will engage the actuating blade. This timing must be adjusted to produce the accumulator impulse after the coin contactor has completed its sixth impulse and before the coin gate has dropped the 25¢ piece. In some cases, it may be necessary to augment this adjustment. (3020 Service Instructions, Page 18.)