



# SERVICE SLANTS

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS"  
ARE WELCOME AT ANY TIME

ISSUED BY WURLITZER SERVICE DEPT., NORTH TONAWANDA, N. Y.

## MODEL 1400 and 1450 WITH 24 SELECTION WALL BOX

In order to select the top sides only of the 24 records, using Model 1400 or 1450 Phonograph, from 24 selection type of Wall Box, the use of a simple adapter is suggested.

Two multi-contact plugs and one socket are wired as pictured below. Plugs #1 and #2 are then connected to the Electric Selector in phonograph to sockets #1 and #2 respectively. The socket of the adapter now provides means for attachment of the Wall Box system in the regular manner.

### Material Required

- 1 - Socket, 33 contacts (H. B. Jones Catalog No. S-333-CCT-K)
  - 2 - Plug, 33 contacts (H. B. Jones Catalog No. P-333-CCT-L)
  - 24 - Jumper Wire - 20, 22 or 24 gauge, 15 inches long
  - 5 - Jumper Wire - 18 gauge, 15 inches long, to be used for 25, 26, 31, 32, 33
- Plugs and sockets available from your local Electronic and Radio Equipment Supplier

