

## MODEL 1600 TONE ARM ADJUSTMENT FOR 45 R. P. M.

Due to the difference in operating radius of the upper and lower tone arms, adjustment of the "link and pin take-up" will be required. This adjustment is accessible at the extreme rear of the upper tone arm. It should be set to provide the same nominal feed-in position for both upper and lower tone arm.

Otherwise tone arm feed-in and feed-in stop adjustments are identical with adjustment procedures contained in the Service Manual, S-312, Section 6, Pages 11 and 15.

50121153

## Sheet 1 of 1

W-258