



SERVICE SLANTS

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS"
ARE WELCOME AT ANY TIME

ISSUED BY WURLITZER SERVICE DEPT., NORTH TONAWANDA, N. Y.

SUBJECT: Coin Conversion on Current Models.

1. To convert Model 1800 to 1 play for 10 cents, and 3 plays for 25 cents.

- a. Open the coin register mechanism and reset the 10 cent and 25 cent "coin selector discs" to 1 play for 10 cents, and 3 plays for 25 cents as follows. Loosen both 10¢ and 25¢ locking screws. Insert a dime in the center (10¢) coin track and manually advance the cycle to maximum throw of the coin selector lever. Hold the 10¢ coin selector disc against the end of the coin selector lever, set, and hold the coin counter wheel to the first detent position to provide 1 play for a dime. Hold these two settings and lock the 10¢ adjustment screw and test for proper operation with a dime.

The 25¢ coin selector disc will be adjusted in the same manner as the 10¢ disc, except the detent position of the coin counter wheel, which will be set to the third detent position before locking the 25¢ adjustment screw. For explanatory figures and detailed instructions see Service Manual 312-S, Section 8, Pages 9 and 10.

- b. Remove the slug rejector and attach the 5 cent Return Spring (Part No. 64168), to the 5¢ Pendulum and upper corner of the Slug Cover Plate, as shown in Fig. 1.
- c. Remove the coin denomination Plate (Part No. 64051) from the "Letter D" Program Holder and insert coin Denomination Plate, Part No. 64059 - (1 Play Dime, 3 Plays Quarter).

2. To convert Model 1700 to 1 Play for 10 cents, and 3 Plays for 25 cents.

- a. Make changes in the Slug Rejector and Coin Register Mechanisms as described in Par. 1-a and 1-b.
- b. Remove the "25 - 10 - 5" Coin Denomination Plate (Part No. 60499) from the Selector Switch Casting and insert Coin Denomination Plate, Part No. 61438 (25-10 cents).

3. To convert Models 5205, 5206, and 5207

- a. Make changes in the Slug Rejector and Coin Register Mechanisms as described in Par. 1-a and 1-b.

- b. (1) For Models 5205 and 5206, remove the "5 - 10 - 25" Coin Entry Plastic (Part No. 50178) and install "10¢ - 3 for 25¢" Coin Entry Plastic (Part No. 59031).
- (2) For Model 5207 remove the "5 - 10 - 25" Coin Entry Plastic (Part No. 62418) and install "3 plays Quarter - 1 play Dime" Coin Entry Plastic (Part No. 64096).
4. After May 1, 1955 Production will assemble Phonograph and Wall Box units adjusted and marked for the new coin requirement (1 Play for a Dime and 3 Plays for a Quarter). Those who wish to operate at 1 play for a nickel, 2 plays for a dime, and 5 plays for a quarter will be required to remove the 5 cent return spring from the slug rejector (See Fig. 1) and re-adjust the coin register mechanism, as described in Par. 1-a, to the desired number of plays for a particular coin.
5. For 2 Nickels, One Dime, or Quarter operation, see National Rejectors Inc. Service Bulletin. This conversion will work properly on Models 1800 and 5207 only.
6. For Coin Entry Plastics and Decals to convert to different coin and play combinations see Service Slant W-165.

