



WURLITZER SERVICE SLANTS

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS"
ARE WELCOME AT ANY TIME

WURLITZER SERVICE DEPT., NORTH TONAWANDA, N. Y.

Phonograph, Stepper and Wall Box Compatibility Charts.

NOTE: Wall Box Models 5220 and 5225 are equipped for Top Tune programming. They should be used with phonographs similarly equipped. Wall Box Models 5220A and 5225A are not equipped for Top Tune programming.

PHONOGRAPH MODEL	REQUIRES STEPPER MODEL	FOR USE WITH WALL BOX MODELS
2300	Stepper Built In	5210 - 5250 - 5252 - 5220A
2310	Stepper Built In	5200 - 5202 - 5225A
2304	257	5205 - 5207
2400	Stepper Built In	5210 - 5250 - 5252 - 5220A
2410	259	5200 - 5202 - 5225A
2404	257	5205 - 5207
2500	261	5210 - 5250 - 5252 - 5220A
2510	259A	5200 - 5202 - 5225A
2504	257	5205 - 5207
2600	261	5210 - 5250 - 5252 - 5220A
2610	259A	5200 - 5202 - 5225A
2700	261	5210 - 5250 - 5252 - 5220A
2710	259A	5200 - 5202 - 5225A
2800	261	5210 - 5250 - 5252 - 5220A
2810	259A	5200 - 5202 - 5225A
2900	261B	5210 - 5250 - 5252 - 5220 - 5220A
2910	259B	5200 - 5202 - 5225 - 5225A
3000	261B	5210 - 5250 - 5252 - 5220 - 5220A
3010	259B	5200 - 5202 - 5225 - 5225A
3100	261B	5210 - 5250 - 5252 - 5220 - 5220A
3110	262	5200 - 5202 - 5225 - 5225A
3200	261B	5210 - 5250 - 5252 - 5220 - 5220A
3210	262	5200 - 5202 - 5225 - 5225A
3300	261B	5210 - 5250 - 5252 - 5220 - 5220A
3310	262	5200 - 5202 - 5225 - 5225A
3400	265	5210 - 5250 - 5252 - 5220 - 5220A
3410	265	5200 - 5202 - 5225 - 5225A

WALL BOX
MODELS

MAY BE USED WITH
PHONOGRAPH MODELS

5205	2304 - 2404 - 2504
5207	2304 - 2404 - 2504
5200	2310 - 2410 - 2510 - 2610 - 2710 - 2810 - 2910 - 3010 - 3110 - 3210 - 3310 - 3410
5202	2310 - 2410 - 2510 - 2610 - 2710 - 2810 - 2910 - 3010 - 3110 - 3210 - 3310 - 3410
5220	2900 - 3000 - 3100 - 3200 - 3300 - 3400
5220A	2900 - 3000 - 3100 - 3200 - 3300 - 3400
5225	2910 - 3010 - 3110 - 3210 - 3310 - 3410
5225A	2910 - 3010 - 3110 - 3210 - 3310 - 3410
5250	2300 - 2400 - 2500 - 2600 - 2700 - 2800 - 2900 - 3000 - 3100 - 3200 - 3300 - 3400
5252	2300 - 2400 - 2500 - 2600 - 2700 - 2800 - 2900 - 3000 - 3100 - 3200 - 3300 - 3400

STEPPER
MODELS

MAY BE USED WITH
PHONOGRAPH MODELS

257	2304 - 2404 - 2504
259	2410
259A	2510 - 2610 - 2710 - 2810
261	2500 - 2600 - 2700 - 2800
261B	2900 - 3000 - 3100 - 3200 - 3300
262	3110 - 3210 - 3310
265	3400 - 3410

SPECIAL STEPPERS

- Model 263 Provides for the operation of Seeburg Nickel, Dime and Quarter Consolette, Rock-Ola Models 500 and 501 as well as AMI Models WQ, WRA and WRB Wall Boxes with the Wurlitzer Model 3200 Phonograph.
- Model 264 Provides for the operation of Seeburg Nickel, Dime and Quarter Consolette Wall Boxes with the Wurlitzer Model 3300-9 160 Selection Phonograph.
- Model 266 Provides for operation of Seeburg Nickel, Dime and Quarter Consolette Wall Boxes with the Wurlitzer Model 3460 Phonograph.