



WURLITZER SERVICE SLANTS

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS" ARE WELCOME AT ANY TIME

WURLITZER SERVICE DEPT., NORTH TONAWANDA, N. Y.

SUBJECT: Connection of existing Wurlitzer Model 5134 Satellite Selective Console Speaker to Wurlitzer Model 3500, 200 Selection, Phonograph.

PROCEDURE: To connect existing Wurlitzer Model 5134 Satellite Selective Console Speaker to Wurlitzer Model 3500, 200 Selection, Phonograph, equipped with a Wurlitzer Model 268 Stepper, perform the following:

1. Run Twelve Conductor Cable, Part No. 126390, from Satellite to Phonograph. Leave enough slack at each end of cable run to allow servicing of Satellite and Phonograph.
2. The cable should be concealed, if possible and kept dry. Fasten the cable every eighteen inches and at all corners.
3. Connect the cable from the Satellite Terminal Strips to WALL BOX Terminal Strip, located on Accessory Terminal Panel on the Phonograph, as follows:

Model 5134 Satellite Terminal No.		Phonograph WALL BOX Terminal No.	Wire Color	Wire Gauge	Function
1	to	1	Grey	20	Pulse
G	to	G	White	16	Ground
2	to	8	Orange	22	Lockout Circuit
3	to	3	Black	16	24 Volts A.C.
4	to	4	Yellow	22	Speaker Ground
5	to	5	Green	22	Relay Ground
6	to	6	Blue	22	Channel "B" Audio
7	to	7	Violet	22	Channel "A" Audio
9	to	9	Pink	22	10 Cents
10	to	10	Tan	22	25 Cents
11	to	11	Brown	22	50 Cents


Tape and stow both ends of Red Wire.

NOTE

The Pink, Tan and Brown Wires from Terminals 9, 10 and 11 are for Computer operation only. However, connecting these wires as outlined on Pg. 1 will in no way effect operation if Computer has not been installed in Phonograph.

Satellite Terminal Strip

Phonograph WALL BOX Terminal Strip

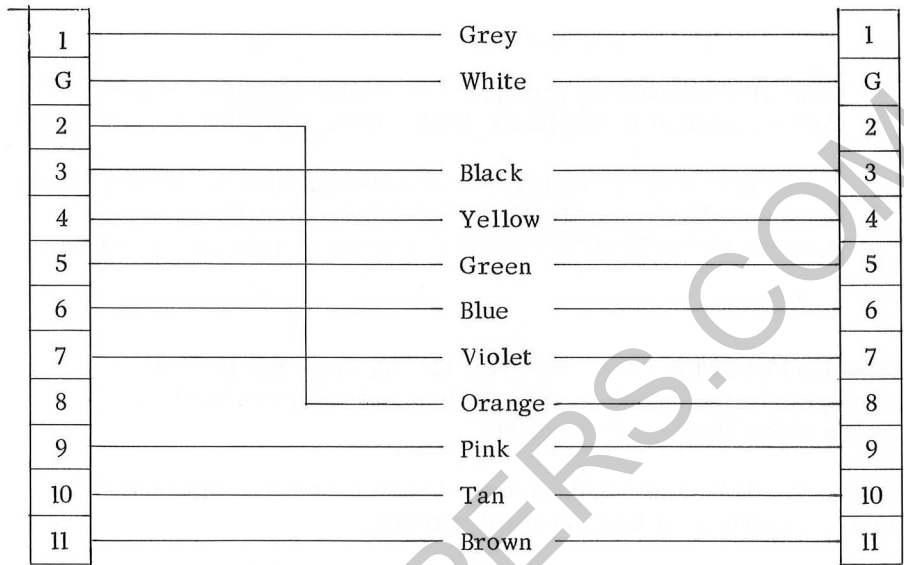

4. Tighten all Terminal Lug screws securely.