


WURLITZER SERVICE SLANT

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS"
ARE WELCOME AT ANY TIME

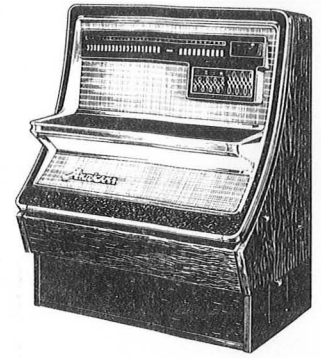

WURLITZER SERVICE DEPARTMENT • NORTH TONAWANDA, NEW YORK

SUBJECT:

Selector Switch Adjustment and/or Cleaning/Burnishing Switch Contact Procedure .

PURPOSE:

To preclude possible damage to timing and credit systems .

METHOD:

1. Position Phonograph Line Switch to OFF .
2. Perform CONNECTOR LINK PLATE ADJUSTMENT and LATCH SOLENOID STOP BRACKET, LATCH SOLENOID and LATCH SOLENOID SWITCH ADJUSTMENT in accordance with Pages 2B and 3B of Model 3700 Series Service Manual .
3. Prior to making LETTER AND NUMBER LATCH LEVER ADJUSTMENT, LETTER AND NUMBER LATCH SWITCH ADJUSTMENT or cleaning or burnishing switch contacts, position wood clinch type LEAD PENCIL between LATCH SOLENOID STOP BRACKET and RELEASE LEVER as shown in Figure 1 .
4. Perform LETTER AND NUMBER LATCH LEVER ADJUSTMENT and LETTER AND NUMBER LATCH SWITCH ADJUSTMENT in accordance with Pages 4B and 5B of Model 3700 Series Service Manual .
5. After completing Step 4, or cleaning/burnishing of switch contacts, remove LEAD PENCIL and position Phonograph Line Switch to ON .

