


# SERVICE SLANTS

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS"  
ARE WELCOME AT ANY TIME

ISSUED BY WURLITZER SERVICE DEPT. NORTH TONAWANDA, N. Y.

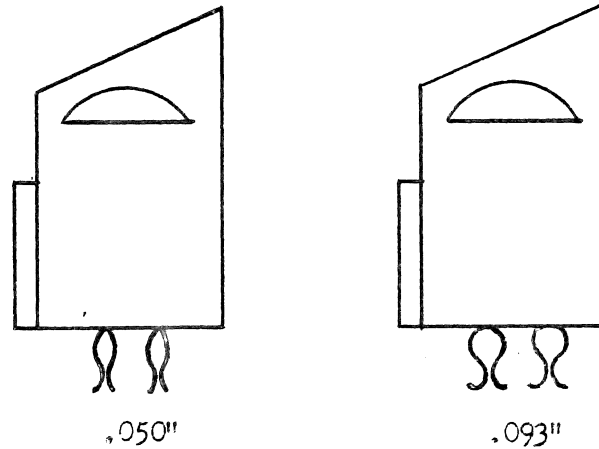

## C A U T I O N

Please note the change in the contacts of the Zenith cartridges. The dimension between the contacts on cartridges we have had in past has been .050" and on the present cartridges this has been changed to .093".

If you should take a cartridge from your stock for the Model 1250 show jobs (having the .093" gap in the contacts) there is danger of it shorting out, it will be necessary to bend the contacts in slightly to overcome. This has been corrected in the cartridges that are included with this Wurlitzer Day demonstrator.

The contacts in the tone arm itself will be altered on all future production of the Model 1250 phonograph.

Therefore this applies to putting new cartridges in Model 1250 phonographs bearing low serial numbers.